


Runa Naked


Marco Acerbis 2023




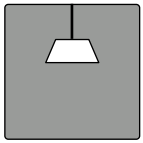


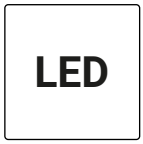


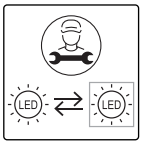


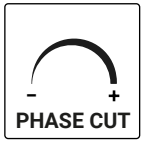

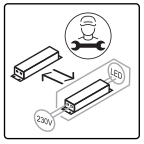

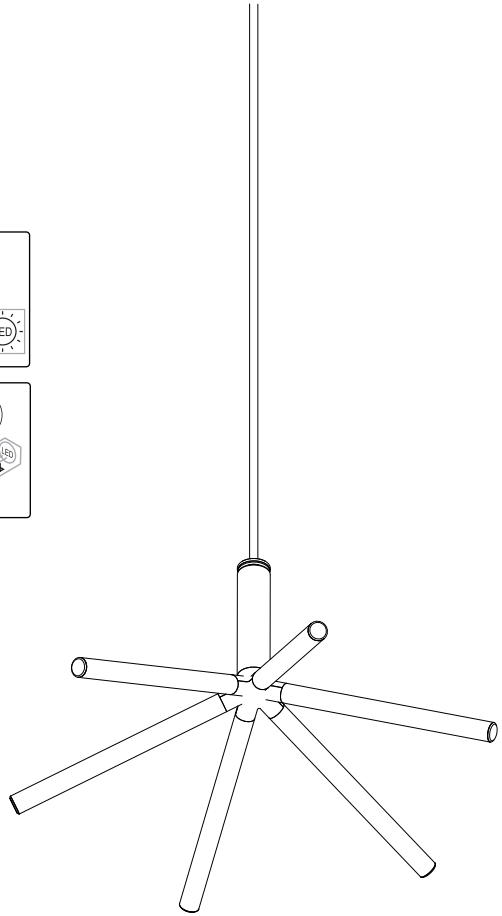

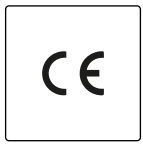


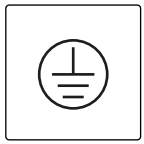





PENTA

Penta s.r.l. Via Trieste, snc - 20821 Meda (MB) - Tel. 0362 1869300 - pentalight.com - info@pentalight.it

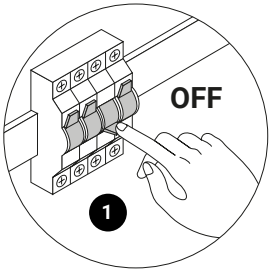


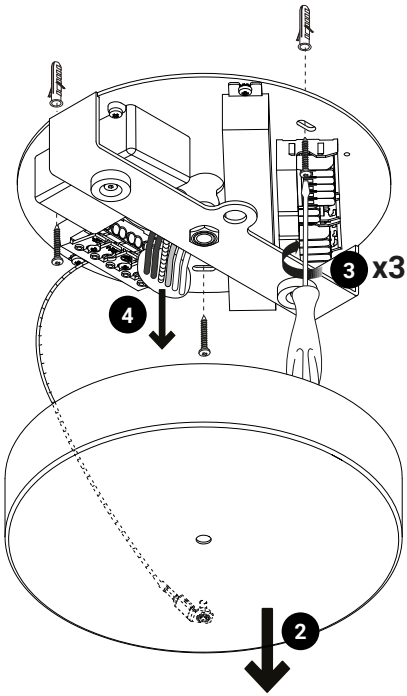


5 5-WIRE CONNECTION

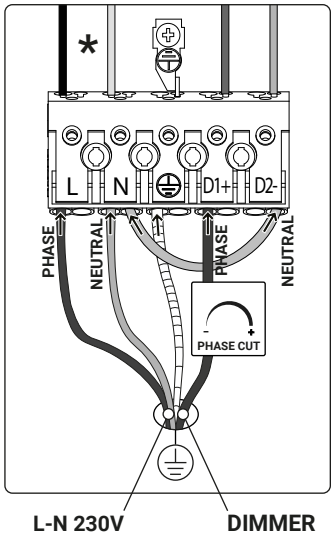


ILLUSTRATIVE DIAGRAM

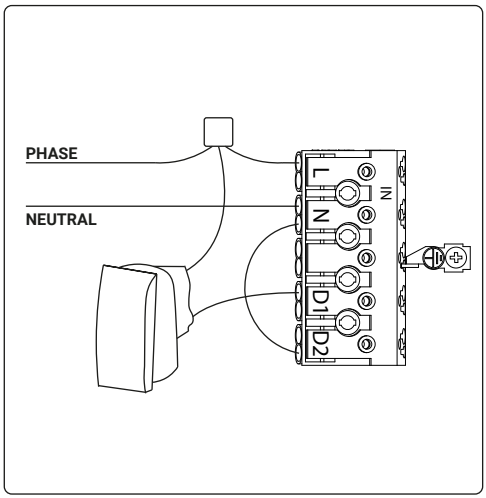

* If the lamp does not turn on or does not respond correctly to dimming, reverse the phase and neutral wires in the cables entering the power terminal.

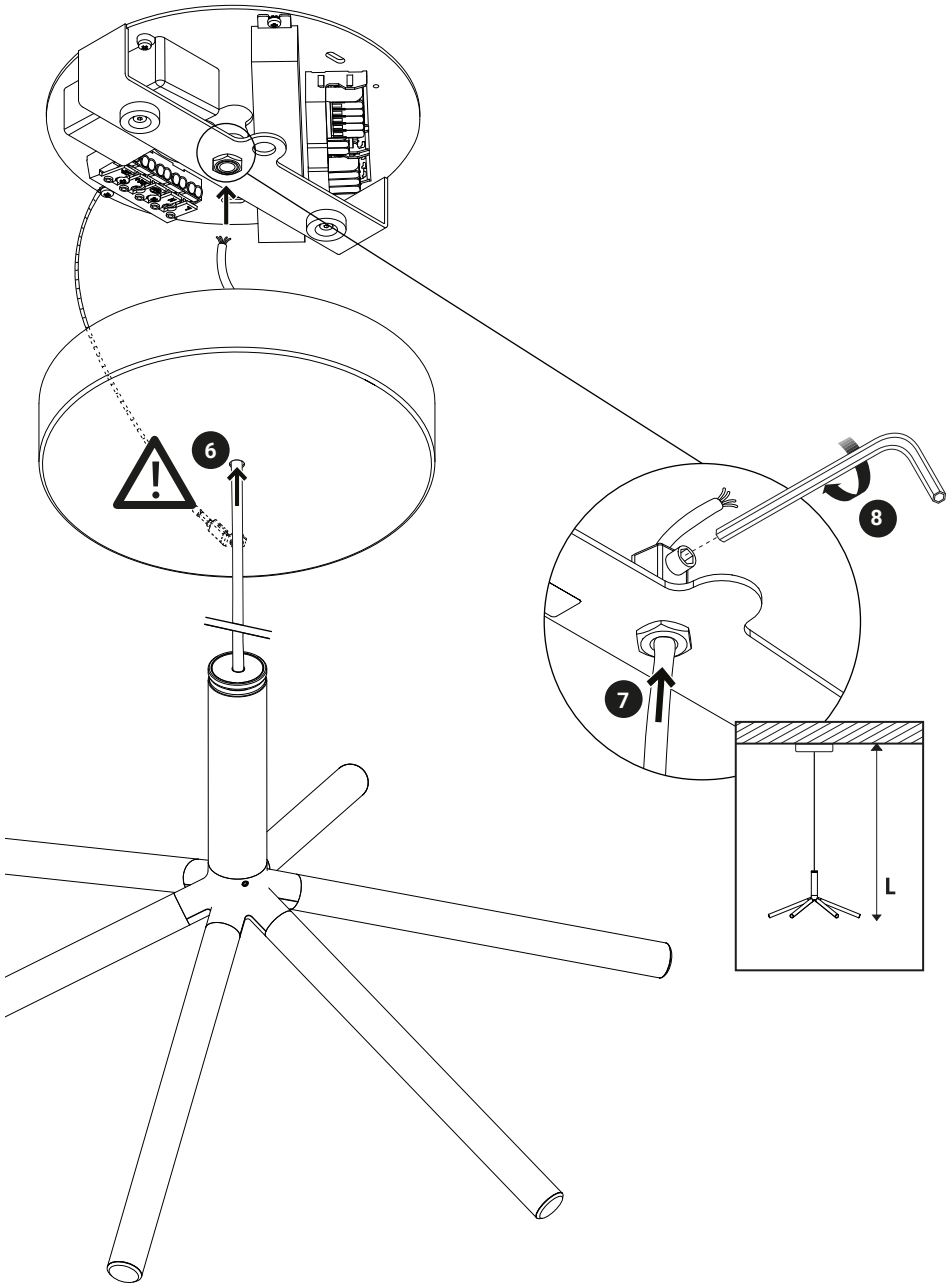
6
8
7
L

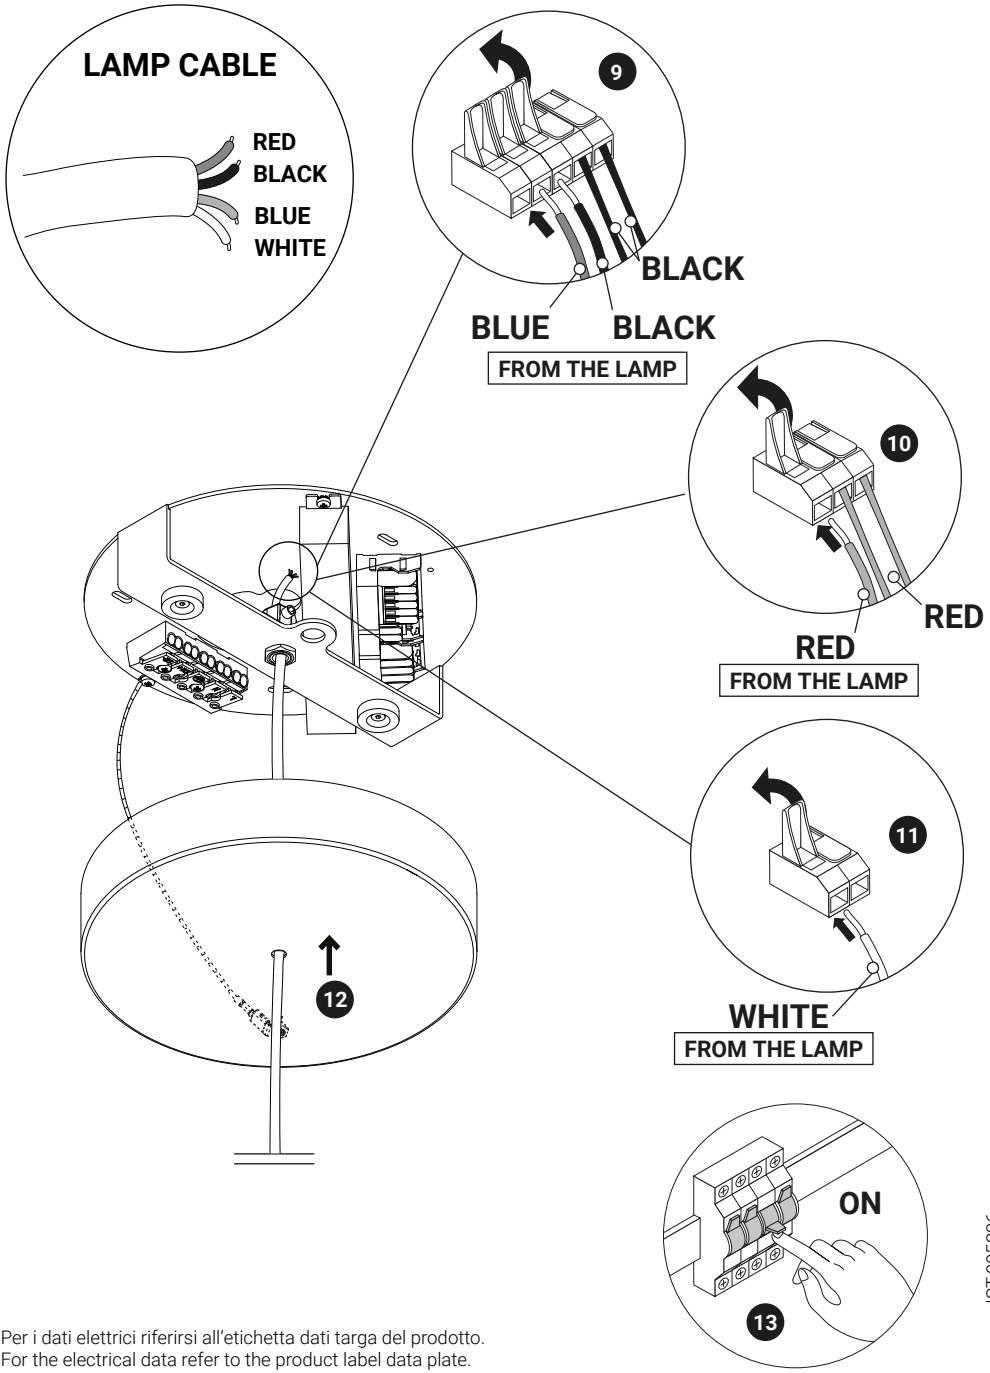


IST.005226-

Per i dati elettrici riferirsi all'etichetta dati targa del prodotto.
For the electrical data refer to the product label data plate.


OPERATION AND WIRING
The Runa lamp can be used in phase cut mode, but requires an additional connection compared to a traditional system.
In fact, the lamp must be connected directly to the 230Vac mains, in addition to the connection through the phase cut dimmer.
This is essential to ensure continuous power supply to the CPU board inside the lamp, which would otherwise risk switching off due to the variable nature of the voltage supplied by the dimmer.
In summary, the lamp must have:
• a direct connection to 230Vac,
• a connection via a phase cut dimmer.

FLICKERING AND DIMMER COMPATIBILITY
With the phase cut dimmer in our possession, we did not encounter any flickering problems. However, if flickering occurs, it will be necessary to apply a dummy load (e.g., an LED bulb, a resistor, or similar) in parallel with the actual load, as indicated by the dotted line in the attached diagram. This allows the dimmer to recognize a minimum load, preventing malfunctions.

2 POLES PHASE CUT

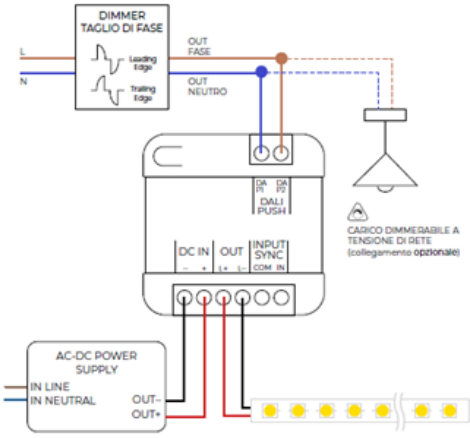

1 POLE PHASE CUT

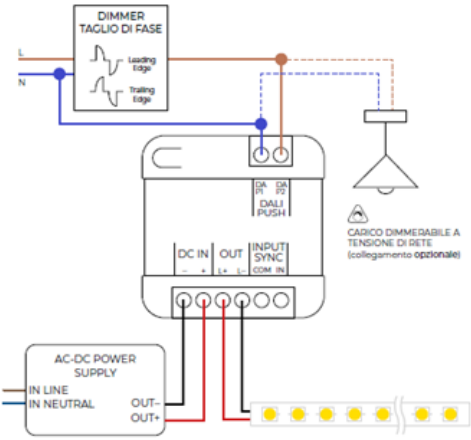

COMPATIBILITY WITH OLDER DIMMERS
If the customer uses an older generation dimmer, it will be necessary to insert an auxiliary load in parallel. Alternatively, we recommend replacing the dimmer with a version compatible with LEDs, with a minimum load equal to or less than 4 mA.

IN CASE OF MALFUNCTION
If the lamp does not turn on or does not respond correctly to dimming, you must reverse the phase and neutral wires in the cables entering the power terminal.

LIGHT EFFECT
Phase cutting dimming does not allow for a smooth effect like DALI/1-10V dimming.

CURA E MANUTENZIONE - *VETRO*

Utilizzare un panno morbido ed un normale detergente neutro specifico per il vetro, seguendo le istruzioni riportate sulla confezione di quest'ultimo. Evitare l'utilizzo di acidi. Non utilizzare spugne abrasive o pagliette metalliche, le quali potrebbero graffiare o rigare la superficie.

CLEANING & MAINTAINANCE - *GLASS*

Use a soft rag and a neutral cleanser, specific for the glass following the instructions indicated on the box. Avoid using acids. Don't use abrasive sponges or scourers, which can scratch the surface.

CUIDADO Y MANTENIMIENTO - *VIDRIO*

Use un paño suave y un detergente neutro normal específico para el vidrio, siguiendo las instrucciones en el empaque de este último. Evitar el uso de ácidos. No use esponjas abrasiVas o almohadillas de lana de acero, ya que podrían rayar o rayar la superficie.